

Note:

(1) 8" tires require the Pneumatic Wheel Hub Adaptor WCP-0100 Rev2

(2) Dimensions are dependent on how much you fill the tire

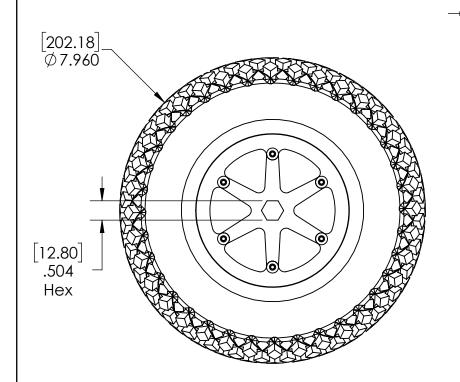

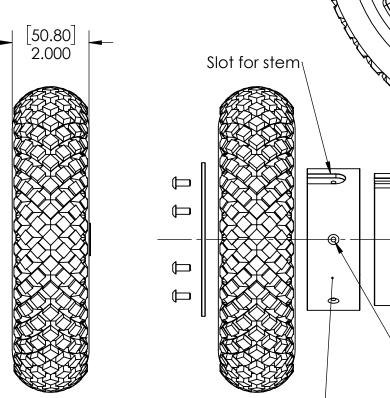

0.18

- Steps for using WCP-0100: (1) Line up slot for stem on the part and the hub
- (2) Drill 0.125" holes on part through the húb
- (3) Rivet using flush mounted rivets (mcmaster 97519A098)


WCP 8 inch Pneumatic Wheel (Diamond) 8 inch Pneumatic Wheel FIRST Robotics - FRC Sheet 1 of 1 1/4/2024 ALL DIMENSIONS ARE IN INCHES [MM].


WWW.WCPRODUCTS.COM


Note:

(1) 8" tires require the Pneumatic Wheel Hub Adaptor WCP-0100 Rev2

(2) Dimensions are dependent on how much you fill the tire

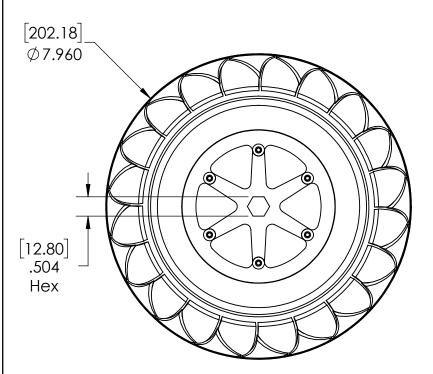

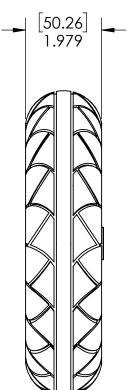

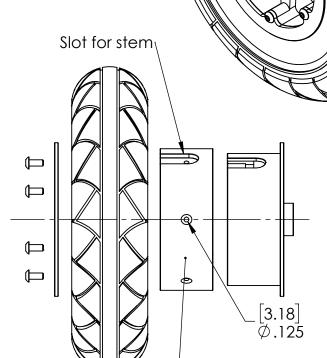

- Steps for using WCP-0100: (1) Line up slot for stem on the part and the hub
- (2) Drill 0.125" holes on part through the húb
- (3) Rivet using flush mounted rivets (mcmaster 97519A098)

WCP 8 inch Pneumatic Wheel (Smooth) 8 inch Pneumatic Wheel FIRST Robotics - FRC Sheet 1 of 1 1/4/2024 ALL DIMENSIONS ARE IN INCHES [MM].

WWW.WCPRODUCTS.COM